



# The Riverside

## Operation Instruction for Comelit Audio/Video Intercom System



### Entrance Panel

To call an apartment from an entrance panel -dial the apartment number then press "Bell" button to initiate call.

**Entrance Panel**  
Model: ikall

### Monitor Features:

1. Microphone
2. Answer Key for first & cancel for second time
3. Speaker
4. Door Unlock Key
5. LCD Colour Display
6. Privacy LED
7. Lift Release
8. Auxiliary
9. Message
10. Not Used
11. Entry station self-connect



**Hands-free Monitor**  
Model: 6802W Maxi IP

Upon receiving call a ring tone will be emitted from the monitor. The video image will automatically appear. You may answer the call by pressing the answer key "2". To grant your visitor/s access into the building, press the unlock key "4", this function will unlock the entry door for approx. 5 seconds. To grant your visitor/s access to your apartment lobby floor level via the lift car press the lift release key "7". This function will de-secure the lift car floor selection button relevant to your floor for approx. 180 seconds.